Dítec


PASM24W



UNIDIRECTIONAL OPENING SENSOR FOR AUTOMATIC DOORS*

User's Guide for product version 0600 and higher See product label for serial number

DESCRIPTION

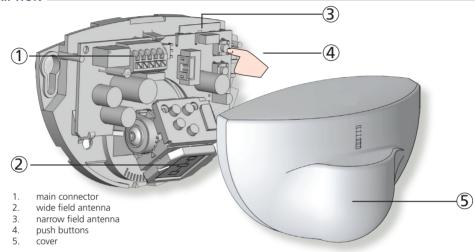

TECHNICAL SPECIFICATIONS

Technology:	microwave and microprocessor		
Transmitter frequency:	24.150 GHz		
Transmitter radiated power:	< 20 dBm EIRP		
Transmitter power density:	< 5 mW/cm ²		
Detection mode:	motion		
Min. detection speed:	5 cm/s		
Supply voltage:	12V to 24V AC ±10%; 12V to 24V DC +30% / -10%		
Mains frequency:	50 to 60 Hz		
Max power consumption:	< 2 W		
Output:	relay (free of potential change-over contact)		
Max. contact voltage:	42V AC/DC		
Max. contact current:	1A (resistive)		
Max. switching power:	30W (DC) / 60VA (AC)		
Mounting height:	from 1.8 m to 4 m		
Degree of protection:	IP54		
Temperature range:	from -20 °C to + 55 °C		
Dimensions:	120 mm (L) x 80 mm (H) x 50 mm (W)		
Tilt angles:	0° to 90° vertical; -30° to +30° lateral		
Material:	ABS		
Weight:	215 g		
Cable lenght:	2.5 m		
Conformity:	RED 2014/53/EU , RoHS 2 2011/65/EU		

Specifications are subject to changes without prior notice.

Measured in specific conditions.

^{*} Other use of the device outside of the permitted purpose can not be guaranteed by the manufacturer.

OPENING THE SENSOR






Before fixing

After fixing

MOUNTING & WIRING



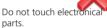



Avoid vibrations.



Do not cover the sensor.




Avoid proximity to neon lamps or moving objects.


APPLICATIONS




Wall mounting above sliding or revolving door

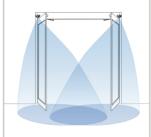

Mounting on door axis (swing doors) Ceiling mounting in front of door

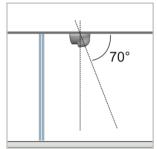


(sliding, revolving or swing doors)

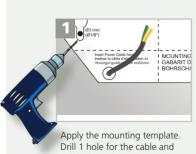


pull it through.

Drill 2 holes for the screws.

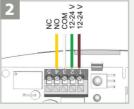


Connect the wires accordingly:


- 1 BROWN POWER SUPPLY 2 GREEN POWER SUPPLY 3 WHITE COM 4 YELLOW NO 5 YELLOW NC

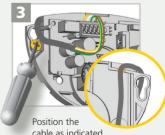



cable as indicated. Fix the sensor firmly.


3 MECHANICAL ADJUSTMENTS

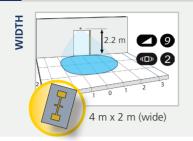

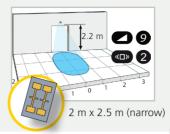


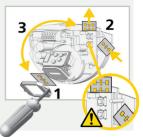

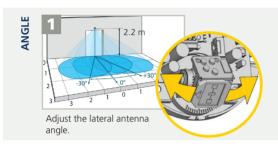

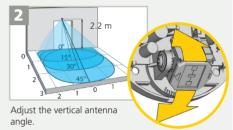

4 SETTINGS (by remote control or push buttons)

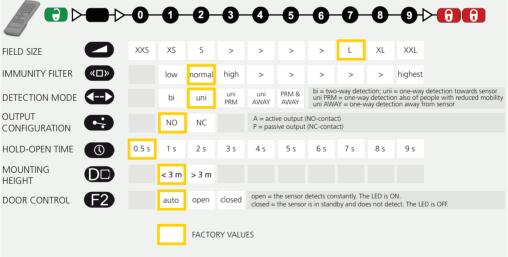

RESETTING TO FACTORY VALUES:






> 2 seconds



FIELD SIZE





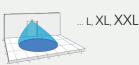

ACCESS CODE

The access code (1 to 4 digits) is recommended to set sensors installed close to each other.

SAVING AN ACCESS CODE:

(3) → **(4)** → **(4) (9) (9) (9) (9) (9) (9) (9) (9)**

DELETING AN ACCESS CODE:

Once you have saved an access code, you always need to enter this code to unlock the sensor.

If you forget the access code, **cut and restore the power supply**. During 1 minute, you can access the sensor without introducing any access code.

TROUBLESHOOTING

ROUBLESHOOTING				
	The door remains closed. The LED is OFF.	The sensor power is off.	1 Check the wiring and the power supply.	
		The door control setting (F2) is set to value 3 (closed).	1 Change the door control setting (F2) to value 1 (automatic).	
	The door does not react as expected.	Improper output configuration on the sensor.	Change the output configuration setting on each sensor connected to the door operator.	
	The door opens and closes constantly.	The sensor is disturbed by the door motion or vibrations caused by the door motion.	 Make sure the sensor is fixed properly. Make sure the detection mode is unidirectional. Increase the antenna angle. Increase the immunity filter. Reduce the field size. 	
	The door opens for no apparent reason.	It rains and the sensor detects the motion of the rain drops.	Make sure the detection mode is unidirectional. Increase the immunity filter.	
		In highly reflective environments, the sensor detects objects outside of its detection field.	1 Change the antenna angle.2 Decrease the field size.3 Increase the immunity filter.	
		In airlock vestibules, the sensor detects the movement of the opposite door.	1 Change the antenna angle. 2 Change the antenna. 3 Increase the immunity filter.	
*	The LED flashes quickly after unlocking.	The sensor needs an access code to unlock.	 Enter the right access code. If you forgot the code, cut and restore the power supply to access the sensor without access code. Change or delete the access code. 	
	The sensor does not respond to the remote control.	Batteries in the remote control are weak or installed improperly.	1 Check and change the batteries if necessary.	
		Remote control badly	1 Point the remote control towards the sensor.	

Dítec

ASSA ABLOY Entrance Systems AB - Lodjursgatan 10 - SE-261 44 Landskrona - Sweden - www.ditecautomations.com

ASS wit Lar The

ASSA ABLOY Entrance Systems AB hereby declares that the that the radio equipment type from the PASM24W is in compliance with Directive 2014/53/EU (RED) and Directive 2011/65/EU (RoHS).

Landskrona, January 2021 Matteo Fino, authorized representative and responsible for technical documentation.

The complete declaration of conformity is available on our website

pointed.

This product should be disposed of separately from unsorted municipal waste